


ODYSSEY BATTERY

Fully Automatic 6-Stage Performance Charging

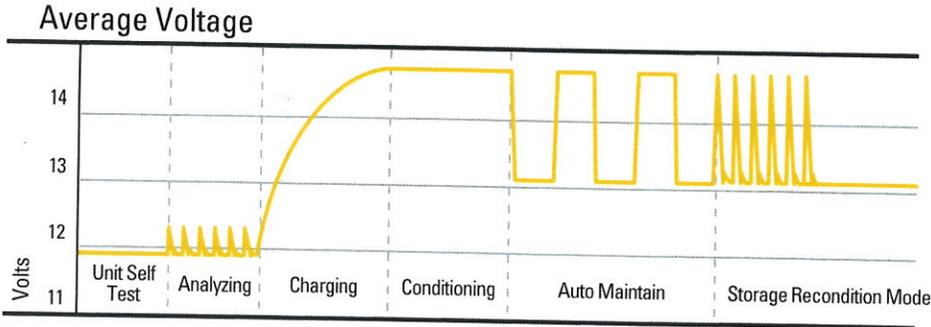

Stage 1 - Unit Self Test: The charger checks connection and polarity, and determines if battery is good to proceed to Step 2.

Stage 2 - Analyzing: The charger determines if battery is capable of being charged. "System Check OK" indicator will illuminate green and proceed to Step 3.

Stage 3 - Charging: The "Charging" status indicator will be red. The charger will use all available charging amps until the battery voltage reaches 14.7 VDC.

Stage 4 - Conditioning: The "Conditioning" status indicator will be amber. The batteries will hold at 14.7 VDC for several hours to condition and fully charge the battery. Upon completion, the charger will go into Auto Maintain (Energy Saver Mode).

Stage 5 - Auto Maintain (Energy Saver Mode): The blue "Power" and green "Auto Maintain" LEDs will be on to indicate Stages 3 and 4 are completed. At this time, the charger will initiate Auto Maintain (Energy Saver Mode),

to monitor and auto maintain the battery only when needed to maintain a full state of charge.

Stage 6 - Storage Recondition Mode: The green "Storage Recondition Mode" indicator will illuminate green with a slow fade in and out pulse to indicate that when in storage, the charger will automatically recondition the battery for up to three hours once a month to maximize battery power and performance and extend battery life.

ODYSSEY® BATTERY CHARGER MODEL	DESCRIPTION	DIMENSIONS							ODYSSEY® BATTERY MATCH UP GUIDE	ODYSSEY® BATTERY AMP HOUR RATING	ODYSSEY® BATTERY MATCH UP GUIDE	ODYSSEY® BATTERY AMP HOUR RATING
		VOLTS	AMPS	CABLES	LENGTH	WIDTH	HEIGHT	WEIGHT				
OBC-12A	12 Amp Portable Charger	12	12	6'	11.25"	3.88"	9.25"	5.5 lbs.	PC310	8	75/86-PC1230	55
									PC370	15	*25-PC1400	65
									PC535	14	*35-PC1400	65
									PC545	13	*34-PC1500	68
									PC625	18	*34R-PC1500	68
									PC680	16	*34M-PC1500	68
									PC925	28	*34/78-PC1500	68
									PC950	34	*PC1700	68

*For non cycling applications batteries up to 100 Ah may be charged

AAB INC.

602 W. Rayen Ave.

Youngstown, OH, 44502

1-800-426-7580

\$140.00

PLUS SHIPPING



www.odysseybattery.com

EnerSys World Headquarters 2366 Bernville Road, Reading, PA 19605, USA Tel: +1-610-208-1991 / +1-800-538-3627

EnerSys EMEA EH Europe GmbH, Löwenstrasse 32, 8001 Zurich, Switzerland Tel: +41 44 215 7410

EnerSys Asia 152 Beach Road, Gateway East Building #11-03, Singapore 189721 Tel: +65 6508 1780

Trademarks and logos are the property of EnerSys and its affiliates unless otherwise noted. Subject to revisions without prior notice. E.&O.E.

US-ODY-PC-AA - February 2016