

ponents do not include obvious adjustments, such as removing door or quarter panel trim panels, testing operation of window or inspecting glass fit after adjustments or replacement have been performed.

**ALIGNMENT**

**Up and Down**

Adjustment of the door can be made at either the pillar or door hinge halves (Fig. 13).

**Fore and Aft**

Adjustment is made at the door hinge half. Adjust only one hinge at a time. Raising outer end of door moves upper part of door forward, when in closed position. Lowering the lower part of door moves lower part forward in closed position.

**DOOR LATCH STRIKER ADJUSTMENT (Fig. 14)**

- (1) Open door and install fixture into latch opening located on panel door inside and secure.
- (2) Close door, then open door and determine if washer is necessary for spacing.
- (3) Install striker to door, install latch, then partially close door until striker lines up with latch.

**DOOR AND LATCH ADJUSTMENTS**

- (1) Check all doors for contour and spacing, and all door lock strikers for proper relation to locks. Fit and readjust as follows:
  - (2) Open doors.
  - (3) Loosen door latch striker (Fig. 14).
  - (4) Loosen the necessary hinge bolts to suit each door as follows: (Fig. 13).
    - (a) For front door upper and lower hinge (body half) (forward most bolt).
    - (b) For front door upper and lower hinge (body half) (rear most bolt).
    - (c) For front door upper and lower hinge (door

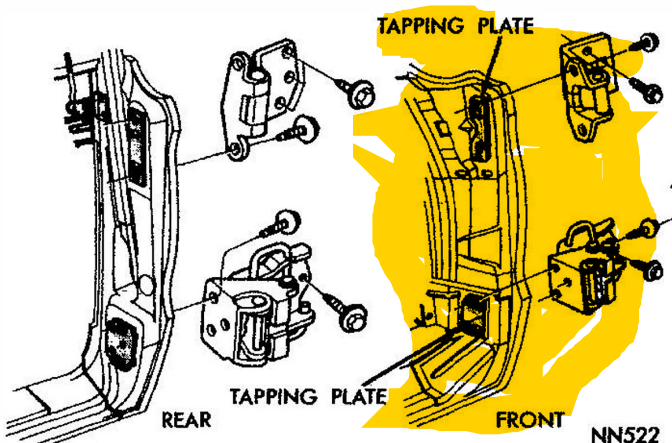


fig. 13-Door Hinges

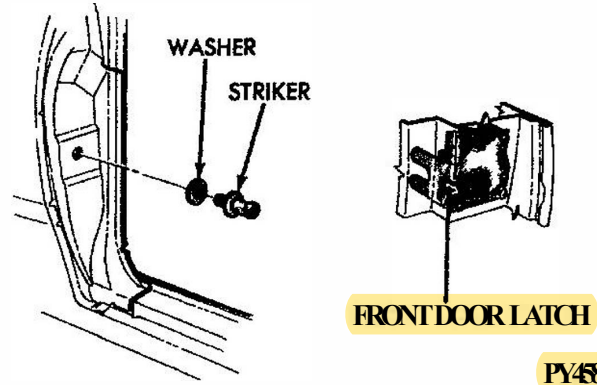


fig. 14-Door latch Striker Adjustment

- half) (2) upper and (3) lower bolts.
- (5) Readjust and fit doors to door openings for alignment of contour lines and belt surfaces.
- (6) Secure previously loosened hinge bolts (Fig. 13).
- (7) Readjust door latch striker.
- (8) Tighten and retorquer striker to 40 to 60 foot-pounds (Fig. 14).
- (9) Close doors.

**LATCH LINK (Fig. 15)**

Assemble link, front door latch (Fig. 15) to lever of handle assembly, (close clip).

**DOOR LOCK CYLINDER LINKAGE (Fig. 16)**

- (1) Connect link front door latch key cylinder to lever portion of key cylinder.
- (2) Insert lower end of link into latch locking lever retainer.

**LOCK CYLINDER-DOOR LOCK (Fig. 17)**

- (1) Place handle assembly (front door outside) face down.
- (2) Position cylinder assembly to handle assembly.

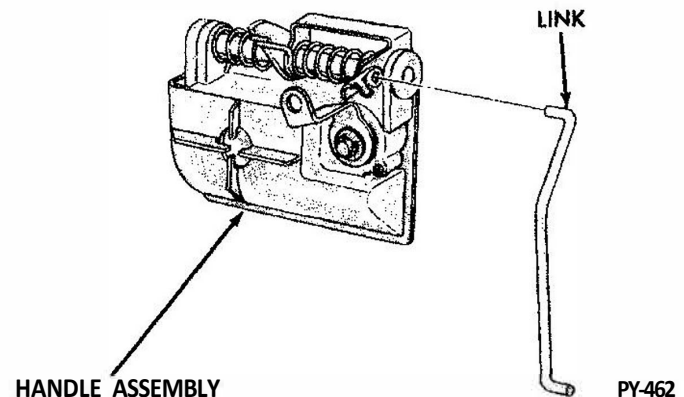


fig. 15-Latch Link